



C3-RS-625

PROFESSIONAL 2-WAY AM/AM REMOTE CAR STARTER
&
KEYLESS ENTRY SYSTEM
With Two-way Serial Port Data Link



Compatible

Please see page 15 of this manual for more details

OPERATION MANUAL

Please register your product at:

www.autopageusa.com













THIS PRODUCT IS DESIGNED FOR PROFESSIONAL INSTALLATION ONLY

SYSTEM OPERATIONS:

WARNINGS:

As with any product that performs automatic functions, there are certain safety precautions that you must practice and be aware of.

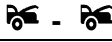1. Keep the transmitter out of children's reach.
2. Do not leave anyone in the vehicle while the vehicle is running on remote control.
3. Alert servicing personnel that the vehicle can be started automatically.
4. Do not start the vehicle by remote while it's in an enclosed area or garage.
5. Always apply the parking brake and lock the vehicle as you exit the vehicle.
6. The vehicle windows must be rolled up.
7. Should the unit malfunction, disconnect the fuse until the problem is corrected.
8. The use and operations of this system is the sole responsibility of the operator.
9. Some areas may have local ordinances that prohibit leaving a vehicle running on public streets.
10. It is not safe to remote start the vehicle if the vehicle is parked on a steep incline.

Transmitter Button	System Function	Remark
	Lock Doors	All doors lock
	Panic function	Press and Hold for 3 seconds. Press  to stop panic.
	Silent Lock / Unlock	Ignition in "off" position.
	Unlock Doors	
	Two Step Door Unlock (Driver's door on the first push; Passenger's door on the second push (optional)	Press twice within 3 seconds.
	Car Locator	Push while the system is armed
	Trunk Release	Press and Hold for 2 seconds
	Activate or Turn Off The Remote Start	Push once or twice depending on system settings (Program)
	Switching Code For 2nd Car Operation. Standard Remote only	Push Before Command

CHANGING THE BATTERY IN YOUR TRANSMITTERS


XT-33: This transmitter uses two (2) 3-volt lithium ion batteries (#CR2016) that are sandwiched together with the (+) side facing upward. To replace the battery, you will need to use a small flat blade screwdriver. Locate the small notch on the lower right side of the transmitter case next to the key ring. Using the flat blade screwdriver, carefully pry the top case from the bottom case. It should snap apart after breaking the seal. Before removing the batteries note the direction of the positive (+) terminal. Place the new batteries in exactly the same manner, being careful not to bend or damage the contact terminal. Snap the cases back together and then test the transmitter to insure it arms and disarms the alarm.

XT-43 LCD 2-Way
Transceiver




(1) AAA Battery

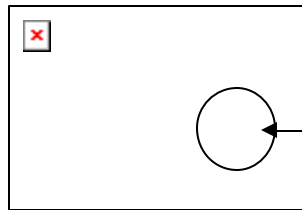

XT-33
Standard Remote




(2) CR2016
3-Volt Batteries

ACTIVE LOCK:

1. Press  button on the transmitter.
2. The Siren will chirp once and parking lights will flash once indicating that the system is now active. The vehicle doors will lock upon activating only when interfaced with the keyless entry system.


SILENT LOCKING / UNLOCKING: Pressing the  +  buttons together on the transmitter will lock or unlock your system, No chirp sound will be heard. Lock / unlock confirmation will be seen through the vehicle's parking lights only.

ACTIVE UNLOCK:

1. Press  button on the transmitter.
2. The horn will chirp twice and parking light will flash twice to indicating that the keyless system is now unlocked. The vehicle doors will unlock and dome lights will turn on for 30 seconds.

PATHWAY ILLUMINATION

This feature turns the parking light “ON” for 30 seconds upon a unlock signal and for 10 seconds upon the lock signal. (Programmable)

TWO STEPS DOOR UNLOCK: This feature will independently unlock the driver door only when deactivating the system. Pushing  the button a second time within 3 seconds will unlock the entire vehicle. (Optional)

LED DISPLAY:

LED	Function
Off	Unlock
Slow Flash	Locked
On (Solid)	Valet Mode

CHIRP INDICATOR:

Chirp	Function
1 Chirp	Lock
2 Chirps	Unlock
6 Chirps	Car Locator

PARKING LIGHTS:

Parking light	Function
1 Flash	Lock
2 Flashes	Unlock
12 Flashes	Car Locator
Constant On	Under Remote Start

DEACTIVATING WITHOUT A TRANSMITTER

The Override function may be used if the remote transmitter is lost or inoperative.

1. Enter the vehicle and turn the ignition switch to ‘ON’ position.
2. Within 10 seconds push and release the valet switch.

You can now start and operate the vehicle normally.

VALET MODE:

The valet switch allows you to temporarily bypass all system function, eliminating the need to hand your transmitter to parking attendants or garage mechanics. When the system is in valet mode, and remote start functions are bypassed, however, the remote panic feature and remote door locks will remain operational. To use the valet mode, the system must first be deactivated either by using you remote transmitter, or by operating the Manual override sequence.

Enter Valet Mode:





1. From the Unlock condition, turn the ignition to "ON" position.
2. Push and hold valet switch for 2 seconds until the LED turns on. The LED will remain on as long as the system is in 'valet mode'.

Exit Valet Mode:

1. Return to normal operation, turn ignition 'on'.
2. Push and hold valet switch for 2 seconds, The LED will turn off indicating the system has exited the valet mode.

PANIC FUNCTION: (IF SIREN or HORN IS INSTALLED)

The transmitter can be used as a remote panic switch to manually trigger the vehicle's horn in case of emergency.

1. Press and hold the  button for 3 second. The siren will immediately sound.
2. During panic mode, the normal function of this transmitter button will be suspended. The  and  buttons can be used to lock and unlock the doors (if the option is installed),
3. To stop the panic, press the  button on the transmitter again.
4. If no buttons are pressed, the panic function will stop automatically in 30 seconds.

DOMES LIGHT CONVENIENCE DELAY & SUPERVISION

This system has a unique feature, which will turn on your vehicle dome light as follows: (optional) *Additional installation required.*

Upon unlocking, the interior lights will remain on for 30 seconds.


Note: Turning on the ignition switch or activating the system will turn off the dome light.

IGNITION CONTROL DOOR LOCKS


If the vehicle's door locks have been interfaced to the security system, the system will automatically lock the vehicle's doors when the ignition is turned "ON" and /or unlock the vehicle's doors when the ignition is

turned "OFF".

TRUNK RELEASE (Additional Installation Required)

Press and hold the  button on transmitter for two seconds to remote control the trunk release or other electric devices.

CAR LOCATOR (ONLY IF SIREN or HORN IS INSTALLED)

Press the  button twice when the system is armed to active car locator function. The horn will chirp 6 times. The parking light will flash 12 times, for you to easily locate your car.

REMOTE START OPERATION:


WARNINGS:

As with any product that performs automatic functions, there are certain safety precautions that you must practice and be aware of.


1. Keep the transmitter out of children's reach.
2. Do not leave anyone in the vehicle while running on remote control.
3. Alert servicing personnel that the vehicle can be started automatically.
4. Do not start the vehicle by remote while it's in an enclosed area or garage.
5. Always apply the parking brake and lock the vehicle as you exit the vehicle.
6. Should the unit malfunction, disconnect the fuse until the problem is corrected.
7. The use and operations of this system is the sole responsibility of the operator.
8. Some areas may have local ordinances that prohibit leaving a vehicle running on public streets.

A. TO REMOTE START THE VEHICLE:

When you want to start your vehicle,

1. Press  button once on the transmitter.
2. The parking lights will flash to indicate the remote start received the signal.
3. The engine will start in approximately 5 seconds.
4. A few seconds after the engine is running, the parking lights will turn on again and climate controls will activate and adjust the vehicles interior temperature to your preset setting.
5. The vehicle will run for a 5 to 30 minute cycle and automatically shut down.

(SAFETY START OPERATION :)

The safety start feature allows you to press the  button **twice** before the

vehicle will remote start or remote shut down. (Programming Required)

NOTE: The Remote Start Unit will not start the vehicle if any one of the following conditions exists:

1. The hood is opened.
2. The brake pedal is pressed.
3. The optional remote start enable toggle switch is in the OFF position.
4. The gear selector is in any gear other than "PARK" or "NEUTRAL"

TO TURN OFF THE REMOTE START:

When the engine is running (by remote start), if you want to stop it,

1. Press * button once on the transmitter.
2. Move the optional remote start enable toggle switch to OFF position.
(If installed)
3. Press the brake pedal, the vehicle will shut down and turn off the parking light to indicate engine stopped.

TO OVERRIDE VEHICLE FROM REMOTE START CONTROL:

To operate the vehicle while it is running from the remote start:

1. Insert the ignition key and turn it to "ON" (not the start) position.
2. Press the brake pedal.

Note: If the brake pedal is pressed before the key is in the ON position, the engine will shut down.

TEMPORARY STOP FEATURE:

This feature allows the vehicle to remain running after the key has been removed from the ignition. This feature is useful for occasions when you wish to exit and lock the vehicle for short periods of time, but would like to leave the engine running and the climate control on.

1. Before turning off the engine, press the * button once on the transmitter. The parking lights will come on and the LED will flash 3 times to confirm Temporary Stop feature 'ON'
2. Turn the ignition key to OFF position. (The engine will stay running.)
3. The engine will run until the pre-programmed time elapsed or shutdown input is received.

TIMER START: You must fully understand this feature to operate the remote start safely. Use caution in using this feature.


This unit can be programmed to start and run the engine every 3 hours. The engine will run for the programmed run time and then shut down.

IMPORTANT: Timer Start should be used only in open areas, **NEVER** start and run the vehicle in an enclosed space such as a garage or carport.

Three hours timer start: This feature is design for an extreme cold climate usage. The system will auto start the vehicle every 3 hours, to prevent engine freezing and hard to start.

A maximum of six cycles can occur.

ENTER:

1. Press the * button once to remote start the vehicle. As soon as the vehicle is running the parking lights will turn 'ON'.
2. Immediately press the  button then press * button. The parking light will flash (3) times. The siren chirps (3) times. The vehicle is now programmed to start every (3) hours.
3. Press the brake pedal to stop the vehicle running.

Exit the timer start:

Timer start can be exited manually as follows:

1. Repeat the Enter Steps from above.
Or
1. Make sure the remote start system is not operating the engine.
2. Turn the ignition on. The LED and parking light will flash (4) times. The siren chirps (4) times.

SHUTDOWN INPUT FOR REMOTE STARTER:

If any of the following conditions exist while the system is operating, the engine will not start or will shut down immediately:


1. The hood is opened.
2. The brake pedal is pressed.
3. The optional remote start enable toggle switch is in the OFF position.
4. Engine is over-revved. {"Tachometer checking type" only}
5. The pre-programmed run time (5 /10 / 20 / 30 minutes) has elapsed.
6. Transmitter * button is pressed.
7. The vehicle refused to start running after {3} unsuccessful attempts.

DISABLING THE REMOTE START SYSTEM: (If Optional toggle switch is installed)

This feature allows your system's remote start unit to be temporarily disabled to prevent the vehicle from being remote started accidentally. This feature is useful if the vehicle is being serviced or stored in an enclosed area. To disable the remote start, move the optional remote start enable toggle switch to the OFF position. Valet mode can also be used.


XT-43 LCD TRANSMITTER OPERATION:


LCD REMOTE CONTROL TRANSMITTER:

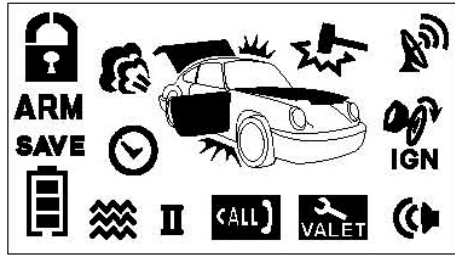


Note: If the system is interfered by stronger radio frequency around, sources of high voltage electric power or such obstacles like tall buildings and so on, the transmission range may get shorter as the system uses low output powered frequency.

BATTERY REPLACEMENT:

A 1.5V type AAA Alkaline battery powers the Remote Transmitter. When the power of the battery weakens a  icon shall be displayed on the LCD screen. When the old battery is replaced with a new one, there will be beep sounds indicate the power is up.

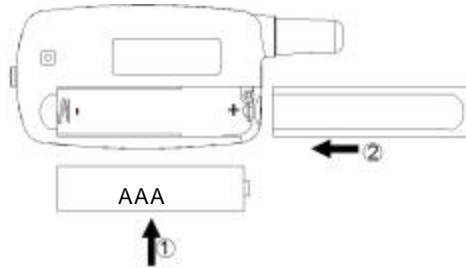

Note: Press the  button two times when the battery compartment is empty, and then insert the new battery.

THE REMOTE LCD ICONS WITH FUNCTION:



Door Lock
Your vehicle doors are locked.



Door Unlock Your vehicle doors are unlocked



Start Mode

Your vehicle is running



Valet Mode

All the function shall be temporarily on hold.



Remote Transmission

You are transmitting the signal to control unit



In – Range Indicator

You are within the remote control range.



Trunk Release Trunk open. Trunk symbol only.



Low Battery

You have to replace the battery of remote control.



Vibration Mode

Remote Control vibrates when the system is triggered



Ignition On



Power Save Mode

Save the battery power

Driver paging

Someone is paging you in front of your vehicle. **



**** Press the valet switch in the vehicle with the Ignition OFF to page the driver carrying the XT-43 two-way remote control.**

PROGRAM MODE FOR LCD REMOTE CONTROL TRANSCEIVER:

Press and hold all four remote control buttons simultaneously unit one long beep is heard. LCD Programming has now been entered.

Transceiver Button	System Function	Remark
Program Mode - 	Switching code for 2nd / 1st Car Operation	Press within 5 seconds
Program Mode - 	Melody / Vibration Mode	Press within 5 seconds
Program Mode - *	Power Save Mode	Press within 5 seconds
	LCD screen lamp turns on for 5 seconds.	
- + *	Clear the Flash Icon and Melody Sound	Press within 3 seconds

1. Second Vehicle Security Operation: Your remote transmitter can be utilized to control a second vehicle's Auto Page security system. To


program the remote control transmitter to a second vehicle, follow the instructions for Transmitter programming. All programming parameters are the same except for the following:


For Regular Remote Control Transmitter:

1. Prior to pushing any button on the transmitter. Press the **Select II** button first on the standard transmitter.
2. Once II button is pressed the LED on the transmitter will illuminate for 3.5 seconds. While the LED is illuminated, press the button for the function you want to operate on the standard remote transmitter to control a second vehicle security system.

For 2-way LCD Remote Control Transceiver:


2nd Car Operation: While the “II” icon display on the LCD screen, you can remote control and communicate with a second Autopage AM frequency security system. It has two short “beep” sounds while pressing any button of the LCD screen transceiver

 1. Press and hold all four remote control buttons simultaneously unit one long beep is heard. LCD Programming has now been entered.
2. Within 5 seconds press and hold  button until **two** beeping sounds are heard and the “II” icon will display on the LCD screen to indicate the second transceiver pin code has been initiated.
3. To exit programming mode, take no action for five seconds. The remote control will generate two long beeps to indicate programming mode has been exited.



Back to first Car Operation:



This will allow you to control and communicate with the first vehicles security system.

1. Press and hold all four remote control buttons simultaneously unit one long beep is heard. Programming has now been entered.
2. Within 5 seconds press and hold  button until **one** beep sound is heard.
3. To exit programming mode, take no action for five seconds. The remote control will generate two long beeps to indicate programming mode has been exited.



Vibration / Melody Mode:


Vibration mode is useful when you are in a noisy place and it is difficult to hear the beep sound from the remote control. In this mode the unit will vibrate if your security system is triggered.

1. Press and hold all four remote control buttons simultaneously until one long beep is heard. Programming has now been entered.
2. Within 5 seconds, press the  button to select the mode of vibration or melody, the  icon will be displayed on the LCD screen to show the LCD remote transceiver is in vibration mode.
3. To exit programming mode, take no action for five seconds. The remote control will generate two long beeps to indicate programming mode has been exited.




Power Save Mode:

While in the power save mode, the LCD remote transceiver will “sleep” until a button is pushed. This will extend the life of battery. When power save mode is “ON”, the remote control will wake up periodically to check for messages from the security module.



1. Press and hold all four remote control buttons simultaneously until one long beep is heard. Programming has now been entered.
2. Within 5 seconds, press the  button to toggle “On” or “Off”. The remote will beep once for “On”, twice for “Off”. When power save mode is “On”, the **SAVE** icon on the LCD screens to indicate entry the “power save mode”
3. To exit programming mode, take no action for five seconds. The remote control will generate two long beeps to indicate programming mode has been exited.



Screen Lamp ON:

Press the  button once and the LCD screen lamp will turn on for 5 seconds.

Clear the Flash Icon and Melody Sound:

Cycle the ignition then press the  button first, within 3 seconds press 

and * buttons at the same time. It will clear the flash icon and melody sound on the LCD screen transceiver.

Stop The Trigger Melody Sound:

While triggering the alarm the LCD screen will alert the user through melody sound and flashing trigger icon. Press any button on the LCD remote transmitter to stop the melody sound.

LIMITED LIFETIME WARRANTY PROVISIONS

(U.S. ,Continental U.S. and Canada Only)

1. Auto Page, Inc. WARRANTS that this new unit has been thoroughly inspected and tested at the factory prior to delivery. Your Auto Page equipment is guaranteed for “life” to the original purchaser/user of the equipment and the original vehicle in which it was installed by an authorized installer under the following conditions: If the product proves defective (according to Auto Page's testing) within the first year, the defective unit may be exchanged or repaired free of charge. “Proof of Purchase” (dated sales receipt) must accompany all warranty returns; **otherwise, your return will be rejected and sent back.** After one (1) year, the purchaser should ship the unit prepaid to Auto Page with a money order in the amount of \$30.00 to cover shipping and handling charges. **Note:** The product needs to be registered online at time of installation. www.autopageusa.com
2. This WARRANTY will be considered void if the equipment has been misused, neglected, improperly serviced or installed, altered, dropped or damaged by water, contrary to the Auto Page OPERATIONS MANUAL. Or, if used with accessories not approved by Auto Page, which may have contributed to the defect. **See note below regarding product installation**.**
3. The purchaser’s remedies under this WARRANTY shall be limited to the repair or replacement of electronic components only. **THE FOLLOWING IS NOT COVERED:** Damages or deterioration to cases, batteries, covers and cabinets; the cost of repairs, replacement and labor of which shall be borne by the purchaser even if

occurring during the WARRANTY period.

4. Any equipment or parts which are claimed to be defective under this WARRANTY must be sent to the Auto Page Service center with “proof of purchase” at the purchaser’s expense prior to such return, a Return Authorization Number should be obtained. Auto Page will return the equipment, charges prepaid. Warranty Service can be provided through the dealer where the equipment is originally purchased.
5. Any unexpired WARRANTY shall be applicable to equipment and parts in the possession of the original purchaser only.
6. THIS WARRANTY IS IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.
7. Auto Page shall not be liable, under the foregoing WARRANTIES or otherwise, for: Any personal injury of any kind to the purchaser, its employees or agents or anyone else whomsoever resulting directly or indirectly from the use or presence of the equipment or parts; Consequential damages of any kind; any inability of the purchaser to use the equipment.

****IMPORTANT NOTE: Any damages to the alarm system resulting from an installation performed by anyone other than a professional installation technician authorized by a dealer of Auto Page will void the product’s limited lifetime warranty.**

Auto Page Warranty:

You must register your product online at <http://www.autopageusa.com> to receive any warranty service.

Please go to the *customer service* tab and select *product registration*.

It is the purchaser’s responsibility to register this product for any future warranty service.

Warning: Some batteries may contain Perchlorate

What is Perchlorate? Perchlorate is both a naturally occurring and manmade contaminant increasingly found in groundwater, surface water and soil. Most perchlorate manufactured in the U.S. is used as an ingredient in solid fuel for rockets and missiles. In addition, perchlorate-based chemicals are also used in the construction of highway safety flares, fireworks, pyrotechnics, explosives, **common batteries**, and automobile restraint systems. Perchlorate contamination has been reported in at least 20 states. Perchlorate greatly impacts human health by interfering with iodide uptake into the thyroid gland. In adults, the thyroid gland helps regulate the metabolism by releasing hormones, while in children; the thyroid helps in proper development. Perchlorate is becoming a serious threat to human health and water resources.

“Perchlorate Material – Special handling may apply.”

For more information, go to

<http://www.dtsc.ca.gov/hazardouswaste/perchlorate/>

C|3™

2-WAY COMMUNICATION TO THE POWER OF 3

THE NEXT REVOLUTION

COMMUNICATE WITH YOUR VEHICLE
VIA YOUR CELLPHONE WITHOUT USING
MINUTES OR ADDING EXTRA SERVICES



Security
Instant Notification



Remote Start
Pre-Warm/Pre-Cool



GPS Tracking
Via Cell or Internet

Exclusively from
AUTOPAGE ((U))

www.autopageusa.com

Patent Pending-C|3 is a trademark of Auto Page, Inc., Torrance, CA

It is recommended to have a minimal digital service plan on your cell phone

Your RS-625 is C|3 compatible and will open your world to the true power of two way communication. Complete tracking and full cell phone functionality can be added to your system. For more information please visit your local authorized Autopage dealer or go to www.autopageusa.com .



Compatible

2-Way Communication to the Power of 3



960 Knox Street Unit B, Torrance, CA 90502

Tel: (310) 323-1800 or (800) 262-2527 www.autopageusa.com